FILTERED ICE KIT: TTFLTRICEKIT


Electrolux

Models:

FPFU19F8WF FPRU19F8WF EI33AF80WS EI33AR80WS

INSTRUCTION SHEET

Kit Contents:

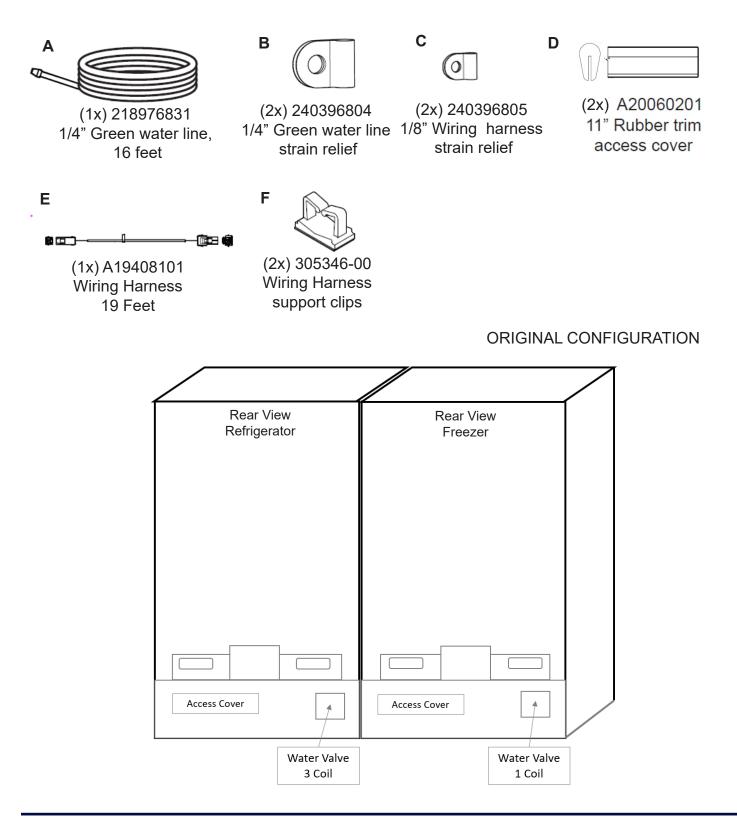

FILTERED ICE KIT: TTFLTRICEKIT

Electrolux

Models:

FPFU19F8WF FPRU19F8WF EI33AF80WS EI33AR80WS

INSTRUCTION SHEET

NOTE: This kit is designed to provide filtered water to the freezer ice maker when a single-door freezer is installed next to a single-door refrigerator.

NOTE: An authorized service technician is recommended to install the filtered ice kit.


NOTE: Disconnect electrical power prior to servicing this product.

Tools Required: 1/4" nut driver


Access Cover Removal

CAUTION: Wear gloves and use extreme CAU-TION when installing the PROTECTIVE rubber trim. The opening may have sharp edges.

1. Remove the 8 access panel screws on the refrigerator and Freezer.

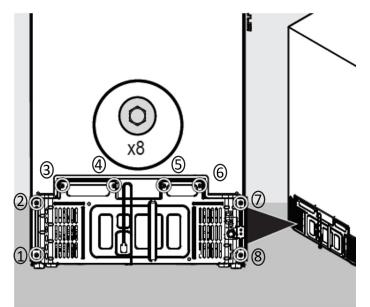

2. Apply the protective rubber trim (D) to the inside edge of water valve opening on both access covers.

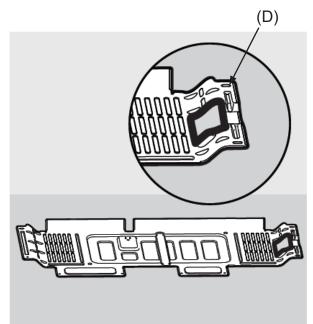



Models:

FPFU19F8WF FPRU19F8WF EI33AF80WS EI33AR80WS

INSTRUCTION SHEET


Refrigerator Connections


1. Feed the green water line (A) and wiring harness (E) through the opening of the refrigerator access cover.

2. Push the green water line into the green port of the water valve.

3. Connect the wiring harness (E), to the connector on the refrigerator.

4. Locate wiring harness support clip at top of refrigerator machine compartment (F), and insert wiring harness to secure.

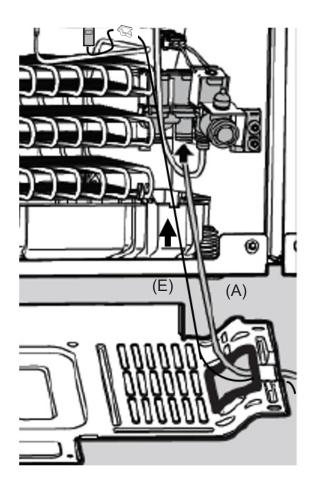

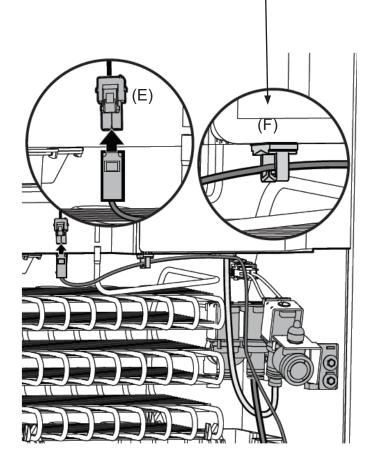

Electrolux

INSTRUCTION SHEET


FPFU19F8WF FPRU19F8WF EI33AF80WS EI33AR80WS

Freezer Connections

NOTE: The freezer water valve and the connecting harness are not used when this kit is installed for filtered water provided by the paired refrigerator.


1. Disconnect and remove the 10" green water line by pushing upward on the port tab, while pulling out the line. 4. Connect the harness (E) from the refrigerator to the connector for the freezer. Locate wiring harness support clip at top of refrigerator machine compartment (F), and insert wiring harness to secure.

Models:

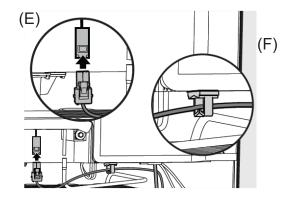

5. Disconnect the harness connection from the water valve. Not required. Water will be supplied from the refrigerator water valve.



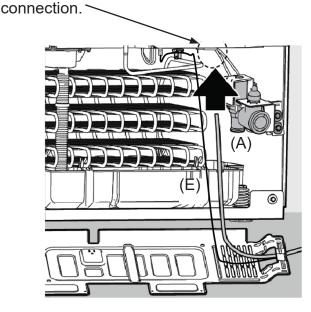


2. Feed the green water line (A) coming from

through the opening of the access cover. 3. Push the green water line into cabinet tube

the refrigerator along with the wiring harness (E)

6. Reinstall access cover for both units.

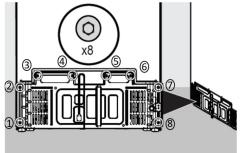

© 2020 Electrolux Home Products, Inc.

ΓAΒ



Models:

FPFU19F8WF FPRU19F8WF EI33AF80WS EI33AR80WS


INSTRUCTION SHEET

Water Line Final Connections

1. Fasten the strain reliefs for green water line (B) and for wiring harness on each unit. (C)

s for green water line 2. Attach the two adhesive support clips (F) and insert the green water line and harness. 3. Loop the water line and wire harness in the

3. Loop the water line and wire harness in the center of the two units.

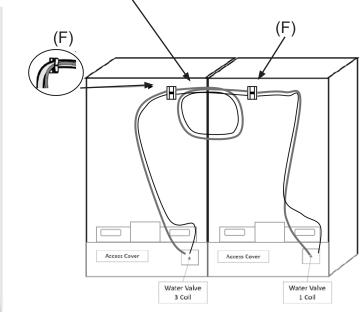

4. Connect and turn on water supply.5. Purge air from water lines by dispensing water from refrigerator water dispenser.(See Use and Care manual for details on water dispenser operation and purging method)

